 



 

 









 



 






































 







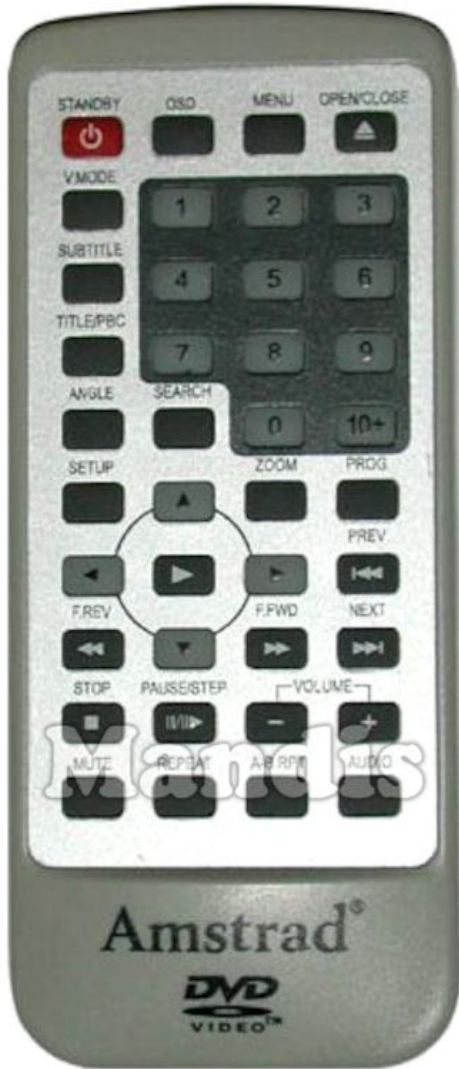


Original	Replacement	Original	Replacement
 Standby	 Power	 Search	 Red / Netflix / Search
 OSD	 Display / Media	 0	 0
 Menu	 Menu / Home	 10+	 Guide / EPG / -/--
 Open / Close	 Eject / Surround	 Setup	 Setup / OPT /
 V.Mode	 Picture / Format	 Up	 Up
 1	 1	 Zoom	 Zoom / Size
 2	 2	 Prog	 TV/Radio /
 3	 3	 Left	 Left
 Subtitle	 Subtitle / EQ	 Play / Enter	 OK
 4	 4	 Play / Enter	 Play / Slow
 5	 5	 Right	 Right
 6	 6	 Prev	 I<< / Preset-
 Title / PBC	 Sound / Title	 F.Rev	 << / Tune-
 7	 7	 Down	 Down
 8	 8	 F.Fwd	 >> / Tune+
 9	 9	 Next	 >>I / Preset+
 Angle	 Info / Angle	 Stop	 Stop / Hold





Original	Replacement	Original	Replacement
 Pause / Step	 Pause / Step / Freeze		
 Volume-	 Vol-		
 Volume+	 Vol+		
 Mute	 Mute / Dimmer		
 Repeat	 Green / APP / Repeat		
 A-B RPT	 Yellow / YouTube / Repeat		
 Audio	 Audio / Lang I/II		

