



	Original	Replacement	Original	Replacement	
	Standby		Power		D.Menu/Index
	Mute		Mute / Dimmer		D.Menu / Top
	Play		Play / Slow		Goto / Subpage
	Pause		Pause / Step / Freeze		Source
	Stop		Stop / Hold		Menu
	Rec		Rec / Rec Mode		Up
	<<		<< / Tune-		Angle/Text
	>>		>> / Tune+		Left
	I<<		I<< / Preset-		OK
	>>I		>>I / Preset+		Right
	S.Mode		Sound / Title		Exit / Cancel / Clear
	Audio/Tv/Radio		Audio / Lang I/II		Down
	Subtitle		Subtitle / EQ		Recall
	Eject/Auto		Eject / Surround		Vol+
	P.Mode		Picture / Format		CH+ / Page+
	Zoom/Hold		Zoom / Size		Vol-
	Sleep		Sleep / Timer		Display
					CH- / Page-





Original	Replacement	Original	Replacement
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	EPG		Guide / EPG / -/--
	0		0
	FAV		Fav / Marker / PC
	Red / Del / Prog		Red / Netflix / Search
	Green / Rename		Green / APP / Repeat
	Yellow / Move / Repeat		Yellow / YouTube / Repeat
	Blue / Skip / A-B		Blue / Prime Video / Random
	I>/Lang		
			Shift + >>1 / Preset+

Original	Replacement	Original	Replacement
	Nicam		
			Shift + Sound / Title
	Audio/Tv/Radio		
			Shift + Audio / Lang I/II
	Aspect		
			Shift + Picture / Format
	Title/Size		
			Shift + Zoom /
	D.Disp/Reveal		
			Shift + D.Menu / Top Menu
	I>/Lang		
			Shift + Right
	DVD Setup		
			Shift + 2
	FAV+		
			Shift + 9
	-/--		
			Shift + Guide / EPG / -/--
	FAV-		
			Shift + Fav / Marker / PC

