


 



 

 



 

 






 

















Original	Replacement	Original	Replacement
 Power	 Power	 TV/AV	 AV / Input / RDS
 Open/Close	 Eject / Surround	 P+	 CH+ / Page+
 Scan	 Display / Media	 TV/DVD	 Smart / List
 Swap	 Back / Return	 V-	 Vol-
 Call	 Shift + OK	 Menu	 Menu / Home
 Mute	 Mute / Dimmer	 V+	 Vol+
 1	 1	 Exit	 Exit / Cancel / Clear
 2	 2	 P-	 CH- / Page-
 3	 3	 P.STD	 Picture / Format
 4	 4	 Red/Picture	 Shift + Picture / Format
 5	 5	 Red/Picture	 Red / Netflix / Search
 6	 6	 Green/Sound	 Sound / Title
 7	 7	 Green/Sound	 Green / APP / Repeat
 8	 8	 Yellow/Time	 Yellow / YouTube / Repeat
 9	 9	 Blue/Function	 Blue / Prime Video / Random
 0	 0	 <<	 << / Tune-
 -/--	 Guide / EPG / -/--	 >>	 >> / Tune+





Original		Replacement	
	<<		<< / Preset-
	>>		>> / Preset+
	Tune		Shift + TV/Radio / Program
	Up		Up
	Down		Down
	Program		TV/Radio /
	Zoom		Zoom / Size
	D.Call		Info / Angle
	[♦]		Shift + Zoom /
	[-]		D.Menu / Top
	[/ =]		Shift + Text /
	[=]		Text / Goto
	[X]		Shift + Exit / Cancel / Clear
	[?]		Setup / OPT /
	[+]		Subtitle / EQ
	Timer		Sleep / Timer
	>		Right

Original		Replacement	





Original	Replacement	Original	Replacement
Power	Power	TV/AV	AV / Input / RDS
Open / Close	Eject / Surround	I-II	Shift + Audio / Lang I/II
Scan	Shift + Setup / OPT / Tools	P+	CH+ / Page+
Swap	Back / Return	TV/DVD	Shift + 2
Call	Smart / List	TV/DVD	Shift + 1
Mute	Mute / Dimmer	V-	Vol-
1	1	Menu	Menu / Home
2	2	V+	Vol+
3	3	Exit	Exit / Cancel / Clear
4	4	P-	CH- / Page-
5	5	P.Std	Picture / Format
6	6	Red / Picture	Red / Netflix / Search
7	7	Red / Picture	Shift + Picture / Format
8	8	Green / Sound	Green / APP / Repeat
9	9	Green / Sound	Shift + Sound / Title
0	0	Yellow / Time	Yellow / YouTube / Repeat
-/--	Guide / EPG / -/--	Yellow / Time	Sleep / Timer

Original	Replacement	Original	Replacement
Power	Power	TV/AV	AV / Input / RDS
Open / Close	Eject / Surround	I-II	Shift + Audio / Lang I/II
Scan	Shift + Setup / OPT / Tools	P+	CH+ / Page+
Swap	Back / Return	TV/DVD	Shift + 2
Call	Smart / List	TV/DVD	Shift + 1
Mute	Mute / Dimmer	V-	Vol-
1	1	Menu	Menu / Home
2	2	V+	Vol+
3	3	Exit	Exit / Cancel / Clear
4	4	P-	CH- / Page-
5	5	P.Std	Picture / Format
6	6	Red / Picture	Red / Netflix / Search
7	7	Red / Picture	Shift + Picture / Format
8	8	Green / Sound	Green / APP / Repeat
9	9	Green / Sound	Shift + Sound / Title
0	0	Yellow / Time	Yellow / YouTube / Repeat
-/--	Guide / EPG / -/--	Yellow / Time	Sleep / Timer





Original	Replacement
Blue / Function	Blue / Prime Video / Random
Rev	<< / Tune-
Fwd	>> / Tune+
I<<	I<< / Preset-
>>I	>>I / Preset+
Stop	Stop / Hold
Setup	Setup / OPT /
Pause / Step	Pause / Step / Freeze
White / Tune	Display / Media
D.Menu	D.Menu / Top
Up	Up
Repeat	Shift + Green / APP /
A-B	Shift + Yellow / YouTube /
Left	Left
Play / Enter	Play / Slow
Play / Enter	OK
Right	Right

Original	Replacement
Slow	Shift + Play /
Angle	Info / Angle
Down	Down
Title / PBC	Sound / Title
Search	Shift + Red / Netflix /
Audio	Audio / Lang I/II
Program	TV/Radio /
Zoom	Zoom / Size
D.Call	Shift + Smart / List
10+	Shift + Guide / EPG / -/-
Caption	Subtitle / EQ
Hold	Shift + Stop /
[-]	Shift + TV/Radio / Program
Mix	Shift + Text /
Text	Text / Goto
[X]	Shift + Exit / Cancel / Clear
Reveal	Shift + Sleep / Timer





Original	Replacement	Original	Replacement
	Size		Shift + Zoom /
	Subcode		Shift + Subtitle / EQ
	>		Shift + Eject / Surround

