




 






 

 

 
 

 


 
 




Original		Replacement		Original		Replacement	
	Power		Power		Ch-		Down
	Mute		Mute		Vol+		Vol +
	1		1		Vol+		Right
	2		2		Vol-		Vol -
	3		3		Vol-		Left
	4		4		OK		Ok
	5		5		Red/EPG		Red
	6		6		Red/EPG		Guide
	7		7		Yellow/Subtitle		Yellow
	8		8		Yellow/Subtitle		Subt
	9		9		Blue/TTX		Text
	0		0		Blue/TTX		Blue
	Menu		Menu		Green/Audio		Green
	Exit		Exit		Green/Audio		Dual
	Ch+		Ch +		i		Info
	Ch+		Up		FAV		Pre Ch
	Ch-		Ch -		TV/Radio		TV/R





Original	Replacement	Original	Replacement
 Video	 Format		
 Prog	 Sleep		
 File	 Media		
 Device	 Smart		
 REC	 Rec		
 Zoom	 Eject		
 Stop	 Stop		
 Prev	 I<<		
 Next	 >>I		
 Play/Pause	 Play		
 Play/Pause	 Pause		
 <<	 <<		
 >>	 >>		

