



Original	Replacement
Power	Power
Vol+	Vol+
Vol-	Vol-
Home	Menu / Home
P+	CH+ / Page+
P-	CH- / Page-
Guide	Guide / EPG / -/--
Source	AV / Input / RDS
Back	Back / Return
Exit	Exit / Cancel / Clear
OK	OK
Up	Up
Down	Down
Right	Right
Left	Left
Play	Play / Slow
Stop	Stop / Hold

Original	Replacement
Smart Colours	Display / Media
123#	1
Rakuten Tv	TV/Radio /
Netflix	Red / Netflix / Search
FPlay	Fav / Marker / PC

