




 











 











 






 
 





 


Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	Pic Size		Format
	Pic Mode		Shift + Format
	Sleep		Sleep
	Dual I-II		Dual
	S.Mode		Shift + Dual
	Still		Pause
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	PRE-CH		Pre Ch
	S.Swap		I<<
	PIP		Options
	P.Input		>>
	P.Position		>>I
	P.Size		Subt
	P.Swap		<<
	TV		TV/R
	PC/HDMI		Media
	AV/Sel		Smart
	Source		AV
	Menu		Menu
	Exit		Exit
	TTX/On		Text
	Mix		Shift + Text





Original	Replacement
	
Up	Up
	
PR+	Ch +
	
Down	Down
	
PR-	Ch -
	
Right	Right
	
Vol+	Vol +
	
Left	Left
	
Vol-	Vol -
	
Enter	Ok
	
Red	Red
	
Green	Green
	
Yellow	Yellow
	
Blue	Blue
	
Store	Shift + Smart
	
Flof/List	List
	
Hold	Stop
	
Cancel	Back

Original	Replacement
	
Index	Info
	
Time	Shift + AV
	
Size	Eject
	
Reveal	D. Menu

