 
 
 
 

 
 
 

 
 
 
 





 
 
 




 

 




 



































Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	Picture		Format
	Sound		Shift + Dual
	Aspect		3D
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Recall		Back
	Menu		Menu
	Source		AV
	Exit		Exit
	[≡i]/Info		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	USB		Media
	CH+		Ch +
	CH-		Ch -
	EPG		Shift + Guide
	Vol+		Vol +
	Vol-		Vol -
	Red		Red
	Green		Green



