



Original	Replacement	Original	Replacement
 Power	 Power	 	 I<<
 Open / Close	 Exit	 	 >>I
 1	 1	 	 <<
 2	 2	 	 >>
 3	 3	 Repeat	 Shift + Text
 4	 4	 	 Play
 5	 5	 	 Pause
 6	 6	 	 Stop
 7	 7	 Mute	 Mute
 8	 8	 Source	 AV
 9	 9	 TV / AV / DVD	 Shift + AV
 0	 0	 Prog+	 Ch +
 -/-- / 10+	 Guide	 Prog-	 Ch -
 Q.View	 Smart	 Vol+	 Vol +
 P.P	 Pre Ch	 Vol-	 Vol -
 [ + ]	 Info	 Menu	 Menu
 Swap	 Back	 Sys.	 Media



