








 










 





	Original	Replacement		Original	Replacement
	 Standby	 Power		 Loudness	 Sound / Title
	 Mute	 Mute / Dimmer		 Memory	 Picture / Format
	 Search	 Red / Netflix / Search		 Function	 OK
	 CD/USB	 Eject / Surround		 1	 1
	 Source	 AV / Input / RDS		 2	 2
	 Repeat	 Green / APP / Repeat		 3	 3
	 Intro	 Shift + OK		 4	 4
	 Random	 Blue / Prime Video / Random		 5	 5
	 Stop	 Stop / Hold		 6	 6
	 CH+	 CH+ / Page+		 7	 7
	 >>I	 >>I / Preset+		 8	 8
	 CH-	 CH- / Page-		 9	 9
	 I<<	 I<< / Preset-		 0	 0
	 <</FF-	 << / Tune-		 10+	 Guide / EPG / -/-
	 >>/FF+	 >> / Tune+		 Prog	 TV/Radio /
	 Play/Pause	 Play / Slow		 Vol-	 Vol-
	 DSP	 D.Menu / Top		 Vol+	 Vol+

Menu

