 

 
 





 



 

 

 



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List
	0		0
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	Vol +		Vol+
	MTS		Info / Angle
	CH +		CH+ / Page+
	Vol -		Vol-
	Aspect		Shift + Picture / Format
	CH -		CH- / Page-
	Guide		Guide / EPG / -/-
	Home		Shift + Menu /
	Rec		Rec / Rec Mode
	Menu		Menu / Home
	Up		Up
	Source		AV / Input / RDS
	Left		Left
	Enter		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down





Original	Replacement
 Display	 Display / Media
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 << / Index	 << / Tune-
 Play/Pause /	 Pause / Step / Freeze
 Play/Pause /	 Shift + Exit / Cancel / Clear
 Play/Pause /	 Play / Slow
 >> / TTX	 >> / Tune+
 >> / TTX	 Text / Goto
 I<< / SUB.PG	 I<< / Preset-
 >>I / Reveal	 >>I / Preset+
 Stop / Mix	 Stop / Hold
 CAP	 D.Menu / Top
 Subtitle	 Subtitle / EQ
 TV / Radio	 TV/Radio /

Original	Replacement
 FAV	 Fav / Marker / PC
 Size / Mouse	 Zoom / Size
 Hold / Refresh	 Shift + Stop /

