



















 
















































Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Shift + Guide / EPG / -/--
	0		0
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	FAV		Fav / Marker / PC
	Vol+		Vol+
	MTS I/II		Audio / Lang I/II
	CH+		CH+ / Page+
	Vol-		Vol-
	Sub-T		Subtitle / EQ
	CH-		CH- / Page-
	Aspect		Shift + Picture / Format
	Freeze		Shift + Pause / Step /
	Sleep		Sleep / Timer
	Source		AV / Input / RDS
	Up		Up
	Display		Display / Media
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down





Original		Replacement		Original		Replacement	
	Exit		Exit / Cancel / Clear		List		Smart / List
	Red		Red / Netflix / Search		T.Shift		TV/Radio /
	Green		Green / APP / Repeat		USB		Shift + 8
	Yellow		Yellow / YouTube / Repeat		EPG		Guide / EPG / -/--
	Blue		Blue / Prime Video / Random				
	<< / Text/CC		<< / Tune-				
	<< / Text/CC		Text / Goto				
	Play/Pause /		Play / Slow				
	Play/Pause /		Pause / Step / Freeze				
	>> / Reveal		>> / Tune+				
	<<< / Hold		<<< / Preset-				
	<<< / Hold		Shift + Stop /				
	>> / Size		>> / Preset+				
	>> / Size		Zoom / Size				
	Stop / Index		Stop / Hold				
	Root		Info / Angle				
	Repeat		Shift + Green / APP / Repeat				

