










Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Menu	 Menu / Home
 0	 0
 Exit	 Exit / Cancel / Clear
 Up	 Up
 CH+	 CH+ / Page+
 Vol-	 Vol-

Original	Replacement
 Left	 Left
 OK	 OK
 Vol+	 Vol+
 Right	 Right
 CH-	 CH- / Page-
 Down	 Down
 EPG	 Guide / EPG / -/--
 Red	 Red / Netflix / Search
 TTX	 Text / Goto
 Blue	 Blue / Prime Video / Random
 Audio	 Audio / Lang I/II
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Subtitle	 Subtitle / EQ
 i	 Info / Angle
 FAV	 Fav / Marker / PC
 Tv/Radio	 TV/Radio /





	Original	Replacement		Original	Replacement
		Video			Shift + 4
		Scan			AV / Input / RDS
		Record			Rec / Rec Mode
		Device			Smart / List
		File			Display / Media
		Zoom			Zoom / Size
		Prev			I<< / Preset-
		Next			>>I / Preset+
		Roll			Sound / Title
		Play			Play / Slow
		Pause			Pause / Step / Freeze
		<<			<< / Tune-
		>>			>> / Tune+

