



Original	Replacement	Original	Replacement
	Power		Power
	Sleep		Sleep
	Menu		Menu
	TXT		Text
	TV		TV/R
	HDD		AV
	Timer		Shift + AV
	Rew		<<
	Play		Play
	FFwd		>>
	Record		Rec
	Pause		Pause
	Stop		Stop
	Card		Shift + Media
	Pvr set		Shift + Smart
	Live TV		Smart
	Back		Back
	Exit		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Info		Info
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Fav		Shift + Pre Ch
	HD		D. Menu
	CH+		Ch +
	CH-		Ch -
	Subt		Subt
	Media		Media
	1		1





Original	Replacement	Original	Replacement
2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
* / TV/RADIO	SHIFT + SEARCH TV/R	SHIFT + SEARCH TV/R	Shift + TV/R
# / SAT	SETTINGS OPT	SETTINGS OPT	Options
Guide	GUIDE	GUIDE	Guide
# / SAT	FAV PRE-CH	FAV PRE-CH	Pre Ch
* / TV/RADIO	SHIFT + GUIDE	SHIFT + GUIDE	Shift + Guide
Red	A	A	Red
Green	B	B	Green
Yellow	C	C	Yellow

Original	Replacement	Original	Replacement
Blue	D	Blue	Blue
Reset	SHIFT + CLEAR EXIT	SHIFT + CLEAR EXIT	Shift + Exit

