








 



 








Original		Replacement		Original		Replacement	
	Power		Power		P+		Ch +
	1		1		P-		Ch -
	2		2		Home		Smart
	3		3		G		Guide
	4		4		i		Info
	5		5		Back		Back
	6		6		Exit		Exit
	7		7		Up		Up
	8		8		Down		Down
	9		9		Right		Right
	0		0		Left		Left
	Lang		Dual		OK		Ok
	TXT		Text		Netflix		Media
	Vol+		Vol +		YouTube		Shift + Media
	Vol-		Vol -		*1		Format
	Mute		Mute		Prime Video		Shift + Smart
	Source		AV		Red		Red





Original		Replacement		Original		Replacement	
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	<<		<<				
	Pause		Pause				
	>>		>>				
	Rec		Rec				
	Play		Play				
	Stop		Stop				

