


















Original	Replacement
	Power
	Mute / Dimmer
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Shift + Guide / EPG / -/--
	0
	Back / Return
	Picture / Format
	Sound / Title
	Setup / OPT /

Original	Replacement
	Sleep / Timer
	AV / Input / RDS
	CH+ / Page+
	Vol+
	Info / Angle
	CH- / Page-
	Vol-
	Display / Media
	Shift + Step / Freeze / Pause / Step /
	Shift + Picture / Format
	Guide / EPG / -/--
	Up
	Left
	OK
	Right
	Menu / Home
	Down





Original	Replacement
	Exit / Cancel / Clear
	Text / Goto
	Play / Slow
	Pause / Step / Freeze
	Stop / Hold
	<< / Tune-
	Zoom / Size
	>> / Tune+
	I<< / Preset-
	>>I / Preset+
	Audio / Lang I/II
	Subtitle / EQ
	Rec / Rec Mode
	Smart / List
	TV/Radio /
	D.Menu / Top
	Red / Netflix / Search

Original	Replacement
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random

