



 









 

 



 

 

 

 

 

 







Original	Replacement
 POWER	 Power
 INFO	 Info / Angle
 MUTE	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 SOURCE	 AV / Input / RDS
 0	 0
 AUDIO	 Audio / Lang I/II
 FORMAT	 Picture / Format
 BACK	 Back / Return

Original	Replacement
 MENU	 Menu / Home
 EXIT	 Exit / Cancel / Clear
 UP	 Up
 LEFT	 Left
 ENTER	 OK
 RIGHT	 Right
 VOL+	 Vol+
 DOWN	 Down
 CH+	 CH+ / Page+
 VOL-	 Vol-
 CH-	 CH- / Page-
 LIST	 Smart / List
 SLEEP	 Sleep / Timer
 EPG	 Guide / EPG / -/-
 FAV	 Fav / Marker / PC
 <<	 << / Tune-
 RED	 Red / Netflix / Search





Original	Replacement	Original	Replacement
	>> / Tune+		
	GREEN / APP / Repeat		
	I<< / Preset-		
	YELLOW / YouTube / Repeat		
	Blue / Prime Video / Random		
	>>I / Preset+		
	PLAY / Slow		
	PAUSE / Step / Freeze		
	TEXT / Goto		
	STOP / Hold		
	SUBTITLE / EQ		
	RADIO / TV/Radio /		
	OPT / Setup / OPT /		
	DMP / Display / Media		
	INDEX / D.Menu / Top		
	REC / Rec Mode		

