



| Original | Replacement |
|--|---|
|  Power |  Power |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  FAV |  Fav / Marker / PC |
|  0 |  0 |
|  TXT |  Text / Goto |
|  Red |  Red / Netflix / Search |
|  Green |  Green / APP / Repeat |
|  Yellow |  Yellow / YouTube / Repeat |
|  Blue |  Blue / Prime Video / Random |

| Original | Replacement |
|--|---|
|  CEC |  Smart / List |
|  ? |  D.Menu / Top |
|  Exit |  Exit / Cancel / Clear |
|  Menu |  Menu / Home |
|  Up |  Up |
|  Back |  Back / Return |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Down |  Down |
|  Guide |  Guide / EPG / -/- |
|  Tools |  Setup / OPT / |
|  Vol+ |  Vol+ |
|  Source |  AV / Input / RDS |
|  PR+ |  CH+ / Page+ |
|  Vol- |  Vol- |
|  Mute |  Mute / Dimmer |





| | Original | Replacement | Original | Replacement |
|--|--|---|----------|-------------|
| |  PR- |  CH- / Page- | | |
| |  I< |  I<< / Preset- | | |
| |  >I |  >>I / Preset+ | | |
| |  << |  << / Tune- | | |
| |  >> |  >> / Tune+ | | |
| |  Rec |  Rec / Rec Mode | | |
| |  Play |  Play / Slow | | |
| |  Pause |  Pause / Step / Freeze | | |
| |  Stop |  Stop / Hold | | |
| |  [<>] |  Picture / Format | | |
| |  Dialog |  Audio / Lang I/II | | |
| |  [...] |  Subtitle / EQ | | |
| |  Tv/Radio |  TV/Radio / | | |
| |  My Media |  Display / Media | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |

