




 


 
 

 
 



 

 
 
 


 
 



 


 
 




 



 


 


 



 


 









 
 




 
 
 



Original		Replacement		Original		Replacement	
	Standby		Power		Zoom/Aspect		3D
	Mute		Mute		CH+		Ch +
	1		1		CH-		Ch -
	2		2		Menu		Menu
	3		3		Exit		Exit
	4		4		Sleep		Sleep
	5		5		Source		AV
	6		6		Up		Up
	7		7		Down		Down
	8		8		Right		Right
	9		9		Left		Left
	0/10		0		OK/Enter		Ok
	Recall/Program		Back		Red		Red
	List/+10		Pre Ch		Green/R.List		Green
	Vol+		Vol +		Yellow/TList/Title		Yellow
	Vol-		Vol -		Blue/D.Display		Blue
	Info/Display		Info		D.Setup		Smart





Original	Replacement
 D.Menu	 D. Menu
 TTX	 Text
 Open/Close	 Eject
 A-B/Index	 List
 Goto/Hold	 Media
 I/II/Audio	 Dual
 Rec/Repeat	 Rec
 Stop/Reveal	 Stop
 Play	 Play
 Pause	 Pause
 >>	 >>
 <</Subpage	 <<
 >>	 >>
 <<	 <<
 Size	 Format
 Subtitle	 Subt
 Tv/Radio	 TV/R

Original	Replacement
 EPG	 Guide
 FAV	 Shift + Pre Ch

