





































 

 






 






 

 



 

 

 







Original	Replacement
	Power
	+ Shift + Power
	1
	4
	7
	8
	2
	5
	6
	3
	0
	+ Shift + Mute / Dimmer
	Sleep / Timer
	CH+ / Page+
	Vol+
	CH- / Page-
	Vol-

Original	Replacement
	Sound / Title
	Up
	Mute / Dimmer
	Left
	OK
	Right
	Back / Return
	Down
	Setup / OPT /
	Pause / Step / Freeze
	Play / Slow
	Stop / Hold
	<< / Tune-
	>> / Tune+
	I<< / Preset-
	I>> / Preset+
	Red / Netflix / Search





Original	Replacement	Original	Replacement
	On		Power
	Standby		Shift + Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	+10		Guide / EPG / -/--
	0		0
	CLR		Exit / Cancel / Clear
	CH/Disc+		CH+ / Page+
	CH/Disc-		CH- / Page-
	Top Menu		D.Menu / Top
	Up		Up
	Muting/Previous Menu		Menu / Home
	Muting/Previous Menu		Mute / Dimmer
	Left		Left
	Enter		OK
	Right		Right
	Return		Back / Return
	Down		Down
	Setup		Setup / OPT /
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Audio		Audio / Lang I/II





Original	Replacement
 On	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 CH/Disc+	 CH+ / Page+
 CH/Disc-	 CH- / Page-
 Guide	 Guide / EPG / -/--
 Up	 Up
 Muting/Previous Menu	 Menu / Home
 Muting/Previous Menu	 Mute / Dimmer

Original	Replacement
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Setup	 Setup / OPT /
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 <<	 << / Tune-
 >>	 >> / Tune+
 On CD	 Shift + Power
 Standby CD	 Shift + Mute / Dimmer
 1 CD	 Shift + 1
 2 CD	 Shift + 2
 3 CD	 Shift + 3
 4 CD	 Shift + 4
 5 CD	 Shift + 5

















































 

 



Original	Replacement
6 CD	+ Shift + 6
7 CD	+ Shift + 7
8 CD	+ Shift + 8
9 CD	+ Shift + 9
+10 CD	+ Shift + Guide / EPG / -/-
0 CD	+ Shift + 0
CLR CD	+ Shift + Exit / Cancel / Clear
CH/Disc + CD	+ Shift + CH+ /
CH/Disc- CD	+ Shift + CH- /
Pause CD	+ Shift + Pause / Step /
Play CD	+ Shift + Play /
Stop CD	+ Shift + Stop /
<< CD	+ Shift + << /
>> CD	+ Shift + >> /
I<< CD	+ Shift + I<< / Preset-
>>I CD	+ Shift + >>I / Preset+
Random CD	+ Shift + Blue / Prime Video / Random

Original	Replacement
Repeat CD	+ Shift + Green / APP /
Display CD	+ Shift + Display / Media





Original	Replacement	Original	Replacement
	On		Power
	Standby		Shift + Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Up		Up
	Left		Left
	Enter		OK
			Right
			Down
			Setup / OPT /
			Pause / Step / Freeze
			Play / Slow
			Stop / Hold
			<< / Tune-
			>> / Tune+

