 










 


 



 






















 




 


 





 








 







Original	Replacement	Original	Replacement
 Power Receiver	 Power	 CD	 Shift + 3
 1	 1	 D.TUN	 Smart / List
 VCR / DVR	 Shift + 4	 Dimmer	 Shift + Mute / Dimmer
 2	 2	 0	 0
 CBL / SAT	 Shift + 0	 Sleep	 Sleep / Timer
 3	 3	 CH+	 CH+ / Page+
 4	 4	 Vol+	 Vol+
 AUX	 Shift + 7	 CH-	 CH- / Page-
 5	 5	 Vol-	 Vol-
 Multi CH	 Shift + 1	 SP A/B	 Info / Angle
 6	 6	 Up	 Up
 DVD	 Shift + 2	 Muting	 Mute / Dimmer
 7	 7	 Left	 Left
 TAPE	 Shift + 5	 Enter	 OK
 8	 8	 Right	 Right
 TUNER	 Shift + 6	 Setup	 Setup / OPT /
 9	 9	 Down	 Down

 













 



















Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 +10/10/-/-	 Guide / EPG / -/-
 0/11	 0
 CLR/12/Sleep	 Sleep / Timer
 CLR/12/Sleep	 Exit / Cancel / Clear
 Guide/Top	 D.Menu / Top
 Up	 Up
 Previous Menu/Muting	 Menu / Home

Original	Replacement
 Left/Playlist/Cat-	 Left
 Enter	 OK
 Right/Playlist/Cat	 Right
 Setup	 Setup / OPT /
 Down	 Down
 Return	 Back / Return
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Stereo	 Sound / Title
 Surround	 Eject / Surround
 < Listening Mode	 Shift + I<< / Preset-
 Listening Mode >	 Shift + >>I / Preset+





 









 







 



 



 











 
 
 


 



 



 






 
 




Original	Replacement
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Level-/Random	Blue / Prime Video / Random
Level+/Repeat	Green / APP / Repeat
Display	Display / Media
Play Mode VCR	Shift + 4
Play Mode DVD	Shift + 2
Play Mode HDD	Shift + 7

Original	Replacement



 














 















 










 





 
 


 



 








Original		Replacement		Original		Replacement	
	Power		Power		Vol-		Vol-
	1		1		Pause		Pause / Step / Freeze
	2		2		Play		Play / Slow
	3		3		Stop		Stop / Hold
	4		4		<<		<< / Tune-
	5		5		>>		>> / Tune+
	6		6		I<<		I<< / Preset-
	7		7		>>I		>>I / Preset+
	8		8		Stereo		Audio / Lang I/II
	9		9		Surround		Eject / Surround
	+10/10/-/-		Guide / EPG / -/-		< Listening Mode		Shift + I<< / Preset-
	0		0		Listening Mode >		Shift + >>I / Preset+
	CLR/12/Sleep		Sleep / Timer		Level-/Random		Blue / Prime Video / Random
	CLR/12/Sleep		Exit / Cancel / Clear		Level+/Repeat		Green / APP / Repeat
	Disc/Album		CH+ / Page+		Display		Display / Media
	Vol+		Vol+				
	Disc/Album CH-		CH- / Page-				





Original	Replacement
 Standby / On	 Power
 VCR/DVR	 4
 CBL/SAT	 0
 AUX	 7
 Multi CH	 1
 DVD	 2
 Tape	 5
 Tuner	 6
 CD	 3
 D.Tun	 Smart / List
 Dimmer	 Shift + Dimmer / Mute
 CLR / Sleep	 Sleep / Timer
 CLR / Sleep	 Exit / Cancel / Clear
 CH Disc	 CH+ / Page+
 Vol+	 Vol+
 CH Disc Album-	 CH- / Page-
 Vol-	 Vol-

Original	Replacement
 Up	 Up
 Muting	 Mute / Dimmer
 Left/Playlist/Cat-	 Left
 Enter	 OK
 Right/Playlist/Cat	 Right
 Setup	 Setup / OPT /
 Down	 Down
 Return	 Back / Return
 Rev. Play	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 <<	 << / Tune-
 >>	 >> / Tune+
 Stereo	 Audio / Lang I/II
 Surround	 Eject / Surround
 < Listening Mode	 I<< / Preset-
 Listening Mode >	 >>I / Preset+





