



































 



 











 



















Original	Replacement	Original	Replacement
On	Power	Level Down	Shift + CH- /
Standby	Shift + Power	Level Up	Shift + CH+ /
Return	Back / Return	I<<	I<< / Preset-
Setup	Setup / OPT /	Play	Play / Slow
CH+/Disc+	CH+ / Page+	>>I	>>I / Preset+
Up	Up	<<	<< / Tune-
Vol+	Vol+	Stop	Stop / Hold
CH-/Disc-	CH- / Page-	>>	>> / Tune+
Left	Left	Rec / Random	Blue / Prime Video / Random
Enter	OK	Rec / Random	Rec / Rec Mode
Right	Right	Pause	Pause / Step / Freeze
Vol-	Vol-	Input Sel. DVD	2
Down	Down	Input Sel. CD	3
Audio Sel	Audio / Lang I/II	Input Sel. V1	1
CH Sel / Top Menu	D.Menu / Top	Input Sel. V2	4
Test / Menu	Menu / Home	Input Sel. TAP	5
Muting	Mute / Dimmer	Input Sel. TUN	6



















 





















 



 







Original	Replacement	Original	Replacement
 Sleep	 Sleep / Timer	 Play	 Play / Slow
 On	 Power	 >>I	 >>I / Preset+
 Standby	 Shift + Power	 <<	 << / Tune-
 Return	 Back / Return	 Stop	 Stop / Hold
 Setup	 Setup / OPT /	 >>	 >> / Tune+
 Disc+	 CH+ / Page+	 Random	 Blue / Prime Video / Random
 Vol+	 Vol+	 Pause	 Pause / Step / Freeze
 Disc-	 CH- / Page-	 Eject	 Eject / Surround
 Vol-	 Vol-	 Input Sel. DVD	 Shift + 2
 Audio Sel /	 Audio / Lang I/II	 Input Sel. CD	 Shift + 3
 Audio Sel /	 AV / Input / RDS	 Input Sel. V1	 Shift + 1
 Top Menu	 D.Menu / Top	 Input Sel. V2	 Shift + 4
 Menu	 Menu / Home	 Input Sel. TAP	 Shift + 5
 Muting	 Mute / Dimmer	 Input Sel. TUN	 Shift + 6
 Angle	 Info / Angle	 Input Sel. V3	 Shift + 7
 Subtitle	 Subtitle / EQ	 Input Sel. V4	 Shift + 8
 I<<	 I<< / Preset-	 Input Sel. V5	 Shift + 9





Original		Replacement		Original		Replacement	
	On		Power		2		2
	Standby		Shift + Power		3		3
	Disc+		CH+ / Page+		4		4
	Vol+		Vol+		5		5
	Vol-		Vol-		6		6
	Muting		Mute / Dimmer		7		7
	Subtitle		Subtitle / EQ		8		8
	I<<		I<< / Preset-		9		9
	Play		Play / Slow		+10		Guide / EPG / -/-
	>>I		>>I / Preset+		0		0
	<<		<< / Tune-				
	Stop		Stop / Hold				
	>>		>> / Tune+				
	Random		Blue / Prime Video / Random				
	Pause		Pause / Step / Freeze				
	Eject		Eject / Surround				
	1		1				

