



Original		Replacement		Original		Replacement	
	Function M		Vol-		3		3
	Cond M		Vol+		4		4
	On		Power		5		5
	Last M		Smart / List		6		6
	Video Off		Picture / Format		7		7
	Step/Slow-		CH- / Page-		8		8
	Step/Slow+		CH+ / Page+		9		9
	2		2		0		0
	>>		>>  / Preset+		+10		Guide / EPG / -/-
	<<		<< / Preset-		Random		Blue / Prime Video / Random
	Clear		Exit / Cancel / Clear		Setup		Setup / OPT /
	Search		Red / Netflix / Search		Standby		Shift + Power
	Repeat		Green / APP / Repeat		Open/Close		Eject / Surround
	A-B		Yellow / YouTube / Repeat		Angle		Info / Angle
	Program		TV/Radio /		Audio		Audio / Lang I/II
	1		1		Subtitle		Subtitle / EQ
	<<		<< / Tune-		Dimmer		Mute / Dimmer































 




























 











Original	Replacement	Original	Replacement
	Display		Display / Media
	Menu		Menu / Home
	Return		Back / Return
	Top Menu		D.Menu / Top
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		OK
	Play		Play / Slow
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	>>		>> / Tune+





Original	Replacement	Original	Replacement
 Open / Close	 Eject / Surround	 Down	 Down
 ON	 Power	 Return	 Back / Return
 STDBY	 Shift + Power	 Setup	 Setup / OPT /
 Audio	 Audio / Lang I/II	 Video Off	 Display / Media
 Angle	 Info / Angle	 Muting	 Mute / Dimmer
 Subtitle	 Subtitle / EQ	 I<<	 I<< / Preset-
 Last M	 Smart / List	 Play	 Play / Slow
 Top Menu	 D.Menu / Top	 >>I	 >>I / Preset+
 Menu	 Menu / Home	 <<	 << / Tune-
 CH+	 CH+ / Page+	 Stop	 Stop / Hold
 Up	 Up	 >>	 >> / Tune+
 Vol+	 Vol+	 <II	 Shift + << /
 CH-	 CH- / Page-	 Pause	 Pause / Step / Freeze
 Left	 Left	 II>	 Shift + >> /
 Enter	 OK	 Repeat	 Green / APP / Repeat
 Right	 Right	 Random	 Blue / Prime Video / Random
 Vol-	 Vol-	 A-B	 Yellow / YouTube / Repeat
















	Original	Replacement		Original	Replacement
	1	 1			
	2	 2			
	3	 3			
	4	 4			
	5	 5			
	6	 6			
	7	 7			
	8	 8			
	9	 9			
	+10	 Guide / EPG / -/--			
	0	 0			
	Search	 Red / Netflix / Search			





Original		Replacement		Original		Replacement	
	Open / Close		Eject / Surround		Audio Sel		Audio / Lang I/II
	On		Power		Display		Display / Media
	Standby		Shift + Power		Dimmer		Shift + Mute / Dimmer
	< Input Selector		I<< / Preset-				
	Input Selector >		>>I / Preset+				
	CH+		CH+ / Page+				
	Up		Up				
	Vol+		Vol+				
	CH-		CH- / Page-				
	Left		Left				
	Enter		OK				
	Right		Right				
	Vol-		Vol-				
	Down		Down				
	Return		Back / Return				
	Setup		Setup / OPT /				
	Muting		Mute / Dimmer				

