

 
 







 
 






 
 






Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	Play		Play
	Pause		Pause
	Stop		Stop
	USB		Media
	Rec		Rec
	Info		Info
	I<<<		I<<<
	>>>I		>>>I
	<<<		<<<
	>>>		>>>
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	FAV		Pre Ch
	SAT		Smart
	Menu		Menu
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Subtitle		Subt
	TXT		Text
	Recall		Back
	Audio		Dual
	Page+		Ch +
	Page-		Ch -
	1		1
	2		2
	3		3





Original		Replacement		Original		Replacement	
4	4	4	4				
5	5	5	5				
6	6	6	6				
7	7	7	7				
8	8	8	8				
9	9	9	9				
0	0	0	0				
EPG	EPG	GUIDE	Guide				
TV/RADIO	Tv/Radio	SEARCH TV/R	TV/R				

