

 
 

 



 

 



 

 

 

 
 


 



 



 

 

 
 
 

 
 
 


 
 
 

 




 

 

 

 


 

 
 
 




Original	Replacement	Original	Replacement
 Power	 Power	 Right	 Right
 1	 1	 Left	 Left
 2	 2	 Enter	 Ok
 3	 3	 Play/Slow	 Play
 4	 4	 Pause/Still	 Pause
 5	 5	 Stop	 Stop
 6	 6	 >>	 >>
 7	 7	 <<	 <<
 8	 8	 Index	 Info
 9	 9	 Cancel	 Exit
 0	 0	 Menu	 Menu
 AV	 AV	 Timer Rec	 SHIFT +  Shift + Rec
 CH/TR+	 Ch +	 Program	 Sleep
 CH/TR-	 Ch -	 Call	 Pre Ch
 Rec/OTR	 Rec	 Clock/Counter	 Smart
 Up	 Up	 Counter Reset	 Media
 Down	 Down	 Zero Return	 Back





Original		Replacement		Original		Replacement	
	Speed SP/LP		Format				
	Tv/VCR		TV/R				
	Eject		Eject				

