 





















 



 







 

 





 








Original	Replacement
 Power	 Power
 i	 ANGLE INFO
 Input Select	 RDS AV INPUT
 Picture Size	 FORMAT PICTURE
 1	 TV 1
 2	 DVD 2
 3	 CD - STB 3
 4	 VIDEO 4
 5	 TAPE 5
 6	 TUNER 6
 7	 AUX - HDD 7
 8	 USB 8
 9	 BLUETOOTH 9
 AUDIO I / II	 LANG I/II AUDIO
 0	 HDMI - BAT 0
 GUIDE EPG	 GUIDE EPG
 MENU	 HOME MENU

Original	Replacement
 Up	 Up
 RETURN	 RETURN BACK
 Left	 Left
 ENTER/ CH LIST	 OK
 ENTER/ CH LIST	 LIST SMART
 Right	 Right
 Mute	 DIMMER MUTE
 Down	 Down
 Subtitle	 EQ SUBTITLE
 Vol +	 + VOL
 FREEZE	 STEP - FREEZE II
 P +	 + CH PAGE
 Vol -	 VOL -
 P <--> P	 PC FAV MARKER
 P -	 - CH PAGE
 Text	 GOTO TEXT
 [≡?]	 MEDIA DISPLAY



