




Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TV / Radio	 TV/Radio /
 0	 0
 Recall	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat

Original	Replacement
 Blue	 Blue / Prime Video / Random
 TTX	 Text / Goto
 Timer	 Sleep / Timer
 TVG	 Guide / EPG / -/--
 Info	 Info / Angle
 List	 Smart / List
 FAV	 Fav / Marker / PC
 Home	 Menu / Home
 Sub-T	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 X	 Exit / Cancel / Clear
 Up / CH+	 Up
 Up / CH+	 CH+ / Page+
 Left / Vol-	 Vol-
 Left / Vol-	 Left
 OK	 OK
 Right / Vol+	 Right





Original	Replacement
	Vol+
	Rec / Rec Mode
	Down
	CH- / Page-
	Display / Media
	Play / Slow
	Pause / Step / Freeze
	Stop / Hold
	D.Menu / Top
	Picture / Format
	<< / Tune-
	>> / Tune+
	I<< / Preset-
	>>I / Preset+
	Shift + Text /
	Shift + Yellow / YouTube /
	Shift + Green / APP / Repeat

Original	Replacement
	Zoom / Size

