



	Original	Replacement		Original	Replacement
	Power	Power		OK	Ok
	Sub-T	Subt		FAV	Pre Ch
	TTX	Text		Exit	Exit
	Mute	Mute		Tv/Radio	TV/R
	Goto	Smart		Recall	Back
	Repeat	Shift + Text		Info	Info
	EPG	Guide		1	1
	Lang	Dual		2	2
	Menu	Menu		3	3
	Page+	Ch +		4	4
	Page-	Ch -		5	5
	Up/CH+	Up		6	6
	Down/CH-	Down		7	7
	Right	Right		8	8
	Vol+	Vol +		9	9
	Vol-	Vol -		0	0
	Left	Left		<<	<<















 








 




 



 












 











 







 



 


Original	Replacement	Original	Replacement
 >>	 >>		
 <<	 <<		
 >>	 >>		
 Play	 Play		
 Pause/Timeshift	 Pause		
 Stop	 Stop		
 Rec	 Rec		
 Red/PVR	 Red		
 Green/V-Format	 Green		
 Yellow/Aspect	 Yellow		
 Blue/Timer	 Blue		

Original	Replacement





Original	Replacement	Original	Replacement
 Standby	 Power	 Right / Vol +	 Vol +
 Sub-T	 Subt	 Left / Vol -	 Left
 TTX	 Text	 Left / Vol -	 Vol -
 Mute	 Mute	 OK	 Ok
 EPG	 Guide	 FAV	 Shift + Pre Ch
 Lang	 Dual	 TV / Radio	 TV/R
 GOTO	 Shift + Guide	 Recall	 Pre Ch
 Repeat	 Shift + Text	 Info	 Info
 Page +	 Shift + Up	 1	 1
 Page -	 Shift + Down	 2	 2
 Menu	 Menu	 3	 3
 Exit	 Exit	 4	 4
 Up / CH +	 Up	 5	 5
 Up / CH +	 Ch +	 6	 6
 Down / CH -	 Down	 7	 7
 Down / CH -	 Ch -	 8	 8
 Right / Vol +	 Right	 9	 9





Original		Replacement		Original		Replacement	
	0		0				
	<< Rev		<<				
	>> Fwd		>>				
	I<< Prev		I<<				
	>>I Next		>>I				
	Play		Play				
	Pause / Timeshift		Pause				
	Stop		Stop				
	Rec		Rec				
	Red / PVR		Red				
	Green / V-Format		Green				
	Green / V-Format		Format				
	Yellow / Aspect		Yellow				
	Yellow / Aspect		Shift + Format				
	Blue / Timer		Blue				
	Blue / Timer		AV				

