



Original		Replacement		Original		Replacement	
	Power		Power		CH-		Ch -
	Mute		Mute		Vol+		Vol +
	1		1		Vol-		Vol -
	2		2		Up		Up
	3		3		Down		Down
	4		4		Right		Right
	5		5		OK/i		Ok
	6		6		Left		Left
	7		7		X		Exit
	8		8		PVR		Back
	9		9		Red		Red
	0		0		Green		Green
	Tv/Radio		TV/R		Yellow		Yellow
	←		Pre Ch		Blue/Ubione		Blue
	Jezyk		Dual		Menu		Menu
	Obraz		Format		EPG		Guide
	CH+		Ch +		Rec		Rec



