

 

 
 


 




 


 





Original	Replacement
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TV / R	 TV/R
 Home	 Smart
 FAV	 Pre Ch
 Back	 Back
 Audio	 Dual

Original	Replacement
 Info	 Info
 EPG	 Guide
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Menu	 Menu
 Exit	 Exit
 Vol +	 Vol +
 Vol -	 Vol -
 P +	 Shift + Ch +
 List	 List
 P -	 Shift + Ch -
 CH +	 Ch +
 CH -	 Ch -
 OPT	 Options





Original	Replacement	Original	Replacement
 Text	 Text		
 SUB	 Subt		
 Message	 Format		
 Pause	 Pause		
 <<	 <<		
 >>	 >>		
 Rec	 Rec		
 Play	 Play		
 I<<	 I<<		
 >>I	 >>I		
 Stop	 Stop		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		

