




 

 

 

 

 



 









 

 



 

 

 

 

 



 



Original	Replacement
 Power	 Power
 Rec	 Rec / Rec Mode
 Red	 Red / Netflix / Search
 I<<	 I<< / Preset-
 Green/[]	 Green / APP / Repeat
 Stop	 Stop / Hold
 Yellow	 Yellow / YouTube / Repeat
 Play/[≡]	 Play / Slow
 Blue/[■]	 Blue / Prime Video / Random
 >>I	 >>I / Preset+
 AV/[?]	 AV / Input / RDS
 I-II/[≡]	 Audio / Lang I/II
 [<>]/[+]	 Picture / Format
 [-S-]	 Zoom / Size
 Menu	 Menu / Home
 [≡]	 Text / Goto
 Pause	 Pause / Step / Freeze

Original	Replacement
 Left	 Left
 Up	 Up
 Right	 Right
 OK	 OK
 Down	 Down
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+
 Vol-	 Vol-
 Smart	 Sound / Title
 P-	 CH- / Page-
 Smart []	 Smart / List
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5







Original		Replacement		Original		Replacement	
	6		6				
	7		7				
	8		8				
	9		9				
	[i+]		Info / Angle				
	0		0				
	P<P		Fav / Marker / PC				



 

 

 

 

 

 

 

 



Original	Replacement	Original	Replacement
0	 Eject / Surround		 Text / Goto
-0-	 Subtitle / EQ		 Left
Power	 Power		 Up
Rec	 Rec / Rec Mode		 Right
I<<	 I<< / Preset-		 OK
Red	 Red / Netflix / Search		 Down
Green/[[]]	 Green / APP / Repeat		 Vol+
Stop	 Stop / Hold		 Mute / Dimmer
Play	 Play / Slow		 CH+ / Page+
Yellow / List	 Yellow / YouTube / Repeat		 Vol-
>>I	 >>I / Preset+		 Sound / Title
AV/[?]	 AV / Input / RDS		 CH- / Page-
I-II/[≡≡]	 Audio / Lang I/II		 Smart / List
[<>]/[+]	 Zoom / Size		 1
PIP [■]	 Picture / Format		 2
Menu	 Menu / Home		 3
Pause	 Pause / Step / Freeze		 4

Original	Replacement	Original	Replacement
0	 Eject / Surround		 Text / Goto
-0-	 Subtitle / EQ		 Left
Power	 Power		 Up
Rec	 Rec / Rec Mode		 Right
I<<	 I<< / Preset-		 OK
Red	 Red / Netflix / Search		 Down
Green/[[]]	 Green / APP / Repeat		 Vol+
Stop	 Stop / Hold		 Mute / Dimmer
Play	 Play / Slow		 CH+ / Page+
Yellow / List	 Yellow / YouTube / Repeat		 Vol-
>>I	 >>I / Preset+		 Sound / Title
AV/[?]	 AV / Input / RDS		 CH- / Page-
I-II/[≡≡]	 Audio / Lang I/II		 Smart / List
[<>]/[+]	 Zoom / Size		 1
PIP [■]	 Picture / Format		 2
Menu	 Menu / Home		 3
Pause	 Pause / Step / Freeze		 4





 



 







 
 
	Original	Replacement		Original	Replacement
	5	 5	5		
	6	 6	6		
	7	 7	7		
	8	 8	8		
	9	 9	9		
	[i+]	 Info	Info / Angle		
	0	 0	0		
	P<P	 Fav / Marker / PC	Fav / Marker / PC		

	Original	Replacement





Original	Replacement
 Power	 Power
 -O-	 Subtitle / EQ
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 AV/[?]	 AV / Input / RDS
 I-II/[≡ ≡]	 Audio / Lang I/II
 [<>]/[+]	 Zoom / Size
 Pause	 Pause / Step / Freeze
 [≡]	 Text / Goto
 Left	 Left
 Up	 Up
 Right	 Right
 OK	 OK
 Down	 Down
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+

Original	Replacement
 Vol-	 Vol-
 Smart J	 Sound / Title
 P-	 CH- / Page-
 Smart []	 Smart / List
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 P<P	 Fav / Marker / PC

