
 

 
 
 
 



 


 







 

 
 
 





 
 











Original	Replacement	Original	Replacement
	Power		Power
	Exit		Sleep
	I-II		Dual
	I.S.		Smart
	[i+]		Info
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Smart Audio		Shift + Dual
	Smart Picture		Format
	Menu		Menu
	Text / OK		Ok
	Text / OK		Text
	Up		Up
	Left		Left
	Right		Right
	Down		Down
	Vol +		Vol +
	Vol -		Vol -
	Mute		Mute
	P +		Ch +
	P -		Ch -
	Red / Rec		Red
	Red / Rec		Rec
	Green / <<		Green
	Green / <<		<<



