



Original	Replacement	Original	Replacement
 Power	 Power	 PR +	 Up
 Mute	 Mute	 PR -	 Ch -
 1	 1	 PR -	 Down
 2	 2	 Vol +	 Vol +
 3	 3	 Vol +	 Right
 4	 4	 Vol -	 Vol -
 5	 5	 Vol -	 Left
 6	 6	 OK	 Ok
 7	 7	 SWAP	 Back
 8	 8	 16:9	 Format
 9	 9	 White / i	 Info
 0	 0	 Red	 Red
 --/--	 GUIDE	 Green	 Green
 AV / TV	 TV/R	 Yellow	 Yellow
 Menu	 Menu	 Blue	 Blue
 TXT	 Text	 Stop	 Stop
 PR +	 Ch +	 Reveal	 Smart

Original	Replacement	Original	Replacement
 PR +	 Up	 TV	 AUX
 PR -	 Ch -	 DVD	 SAT
 PR -	 Down	 SLEEP	 AV
 Vol +	 Vol +	 DUAL	 SUBT
 Vol +	 Right	 SEARCH	 PICTURE
 Vol -	 Vol -	 E-MANUAL	 REPEAT
 Vol -	 Left	 D.MENU	 TEXT
 OK	 Ok	 TOP MENU	 DISPLAY INFO
 SWAP	 Back	 MENU	 OK
 16:9	 Format	 CLEAR	 EXIT
 White / i	 Info	 RETURN BACK	 BACK
 Red	 Red	 HOME	 SMART
 Green	 Green	 VOL +	 APP
 Yellow	 Yellow	 VOL -	 MEDIA
 Blue	 Blue	 1	 2
 Stop	 Stop	 3	 3
 Reveal	 Smart	 4	 5
		 5	 6
		 6	 6
		 7	 7
		 8	 8
		 9	 9
		 0	 0
		 GUIDE	 FAV
		 PRE-CH	 PRE-CH
		 A	 A
		 B	 B
		 C	 C
		 D	 D
		 Mandis SHOP	 Mandis SHOP
		 www.mandis.tv	 www.mandis.tv



