 

 

 



 

 



 
 
 

 

 

 
 


 

 

 







Original	Replacement
 Power	 Power
 Off Timer	 Sleep / Timer
 TV Input	 TV/Radio /
 AV Input	 AV / Input / RDS
 Menu	 Menu / Home
 Text	 Text / Goto
 STTL	 Subtitle / EQ
 Aspect	 Picture / Format
 Info	 Info / Angle
 Exit	 Exit / Cancel / Clear
 Home	 Shift + Home / Menu /
 APPS	 Shift + Green / APP /
 Up	 Up
 Guide	 Guide / EPG / -/-
 Left	 Left
 OK	 OK
 Right	 Right

Original	Replacement
 Option	 Setup / OPT /
 Down	 Down
 Back/Return	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+
 Vol-	 Vol-
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





	Original	Replacement		Original	Replacement
	6		6		
	7		7		
	8		8		
	9		9		
	Help/?		Smart / List		
	0		0		
	Last View/Recall		Fav / Marker / PC		
	<<		<< / Tune-		
	Play		Play / Slow		
	>>		>> / Tune+		
	l<<		l<< / Preset-		
	Pause		Pause / Step / Freeze		
	>>l		>>l / Preset+		
	Stop		Stop / Hold		
	Rec		Rec / Rec Mode		

	Original	Replacement		Original	Replacement

