

 
 
 
 
 


 
 


 
 




 




 


 










 
 
 
 

 
 




 


 
 
 
 
 

 

 
 

 








Original	Replacement	Original	Replacement
	Power		Power
	SD Card		Media
	Input TV		TV/R
	Input AV		AV
	Menu		Menu
	[+]/Aspect		Format
	Internet		Smart
	Direct Tv Rec		Eject
	i		Info
	Exit		Exit
	Viera Link		List
	Guide		Guide
	Viera Tools		D. Menu
	Option		Options
	Return/Back		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	[≡]/Text		Text
	[≡♦]/Sttl		Subt
	[≡i]/Index		3D
	[≡+]/Hold		Dual
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6





Original	Replacement	Original	Replacement
7	7	<</I<<	<<
8	8	>>/>>I	>>
9	9	Power Tv	Shift + Ok
0	0	Rec Tv (Down)	Shift + Rec
Last View	Pre Ch	Programme Down Tv (Down)	Shift + Down
Vol+	Vol +	Programme Up Tv (Down)	Shift + Up
Vol-	Vol -	Play Tv (Down)	Shift + Play
Mute	Mute	<</I<< Tv	I<<
CH+	Ch +	>>/>>I Tv	>>I
CH-	Ch -	Pause/Step Tv (Down)	Shift + Pause
Power DVD/VCR	Shift + Power	Stop Tv (Down)	Shift + Stop
Rec DVD/VCR	Rec		
Programme Down DVD/VCR	Shift + Ch -		
Programme Up DVD/VCR	Shift + Ch +		
Play DVD/VCR	Play		
Stop DVD/VCR	Stop		
Pause/Step	Pause		

Original	Replacement	Original	Replacement
<</I<<	<<	<</I<< Tv	I<<
>>/>>I	>>	>>/>>I Tv	>>I
Power Tv	Shift + Ok	Pause/Step Tv (Down)	Shift + Pause
Rec Tv (Down)	Shift + Rec	Stop Tv (Down)	Shift + Stop
Programme Down Tv (Down)	Shift + Down		
Programme Up Tv (Down)	Shift + Up		
Play Tv (Down)	Shift + Play		
<</I<< Tv	I<<		
>>/>>I Tv	>>I		
Pause/Step Tv (Down)	Shift + Pause		
Stop Tv (Down)	Shift + Stop		



DVD/VCR