





 
 
Original	Replacement
 Power	 Power
 TV	 Shift + TV/R
 VCR/AUX	 Shift + Options
 Sleep	 Sleep
 Tv/AV	 AV
 Tuner/Band	 TV/R
 DVD/CD	 Pre Ch
 FL	 Shift + Info
 Play Mode-Mix	 Shift + Play
 Repeat	 Text
 Position	 D. Menu
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6

Original	Replacement
 7	 7
 8	 8
 9	 9
 0	 0
 ≥10 / -/-	 Guide
 Cancel	 Exit
 I<< Skip	 I<<
 Skip >>I	 >>I
 << Slow/Search	 <<
 Slow/Search >>	 >>
 Stop	 Stop
 Pause	 Pause
 Play	 Play
 Top Menu/Direct Navigator	 Media
 Menu/Play List	 Menu
 Display	 Info
 Return	 Back








 



 








 



 
 
 





Original	Replacement
	
Up	Up
	
Down	Down
	
Right	Right
	
Left	Left
	
Enter	Ok
	
Vol+	Vol +
	
Vol-	Vol -
	
Muting	Mute
	
C.S.M.	Options
	
SFC	Subt
	
Subwoofer	List
	
S.SRND	Red
	
Dolby PL	Green
	
C.Focus	Yellow
	
CH Select-Test	Smart
	
F.M Mode Setup	Format
	
Zoom	Eject

Original	Replacement
	
Group	Blue
	
Audio	Dual





	Original	Replacement	Original	Replacement
	Power		Power	
	1		1	
	2		2	
	3		3	
	4		4	
	5		5	
	6		6	
	7		7	
	8		8	
	9		9	
	0		0	
	≥10 / -/--		Guide	
	Tv/AV		AV	
	CH+		Ch +	
	CH-		Ch -	
	Tv Vol+		Vol +	
	Tv Vol-		Vol -	





Original	Replacement
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
≥10 / -/--	Guide
>>	>>
<<	<<
<<	<<
>>	>>
Pause	Pause

Original	Replacement
Play	Play
Stop	Stop

