 



 



 











 



 
 





 


 
 
 

 
 
 

 
 
 



 







 
 



 



 




 



 

 





 
 

 

 






Original	Replacement	Original	Replacement
 Power	 Power	 Green	 Green
 Input TV	 TV/R	 Yellow	 Yellow
 Input Av	 AV	 Blue	 Blue
 Aspect	 Format	 Text	 Text
 Viera Link	 Smart	 STTL	 Subt
 Option	 Options	 Index	 Media
 Direct TV Rec	 Rec	 Hold	 Shift + Stop
 Guide	 Guide	 1	 1
 Exit	 Exit	 2	 2
 Up	 Up	 3	 3
 Left	 Left	 4	 4
 OK	 Ok	 5	 5
 Right	 Right	 6	 6
 Down	 Down	 7	 7
 Menu	 Menu	 8	 8
 Return	 Back	 9	 9
 Red	 Red	 0 / VCR	 0



 



 

 





 













Original		Replacement		Original		Replacement	
	Power DVD		Power				
	Rec DVD		Rec				
	Programme Down		Ch -				
	Programme Up		Ch +				
	I<< DVD		I<<				
	<< DVD		<<				
	>>I DVD		>>I				
	>> DVD		>>				
	Stop DVD		Stop				
	Pause/Step DVD		Pause				
	Play DVD		Play				





Original	Replacement	Original	Replacement
 VCR Power	 Power		
 VCR Rec	 Rec		
 VCR	 Ch -		
 VCR	 Ch +		
 VCR << / I<<	 <<		
 VCR << / I<<	 I<<		
 VCR >> / >>I	 >>		
 VCR >> / >>I	 >>I		
 VCR Stop	 Stop		
 VCR Pause / Step	 Pause		
 VCR Play	 Play		

