

 









 

 


 
 









Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Lang		Audio / Lang I/II
	[ = ]. .		Subtitle / EQ
	Mute		Mute / Dimmer
	Home		Shift + Menu /
	Smart		Smart / List
	Vol+		Vol+
	Vol-		Vol-
	P+		CH+ / Page+
	P-		CH- / Page-
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		OK
	[G]		Guide / EPG / -/--
	i		Info / Angle
	←		Back / Return
	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	Source		AV / Input / RDS
	Text		Text / Goto
	<<		<< / Tune-
	Stop		Stop / Hold





	Original	Replacement	Original	Replacement
	 >>	 >> / Tune+		
	 Rec	 Rec / Rec Mode		
	 Pause	 Pause / Step / Freeze		
	 Play	 Play / Slow		
	 Red	 Red / Netflix / Search		
	 Green	 Green / APP / Repeat		
	 Yellow	 Yellow / YouTube / Repeat		
	 Blue	 Blue / Prime Video / Random		
	 Netflix	 Shift + Red / Netflix /		
	 YouTube	 Shift + Yellow / YouTube /		
	 prime video	 Shift + Blue / Prime		
	 Google Play	 Display / Media		

