

 



 
 






 

















Original	Replacement
 Power	 Power
 Guide	 Guide / EPG / -/--
 Input Tv	 TV/Radio /
 Input AV	 AV / Input / RDS
 Menu	 Menu / Home
 Text	 Text / Goto
 STTL/AD	 Subtitle / EQ
 Aspect	 Picture / Format
 Info	 Info / Angle
 Exit	 Exit / Cancel / Clear
 Netflix	 Shift + Red / Netflix /
 Home	 Shift + Menu /
 APPS	 Shift + Green / APP /
 Option	 Setup / OPT /
 Return	 Back / Return
 Up	 Up
 Down	 Down

Original	Replacement
 Right	 Right
 Left	 Left
 OK	 OK
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





	Original	Replacement		Original	Replacement
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		
	Last View		Fav / Marker / PC		
	Hexa Boost		Sound / Title		
	<</ <<		<< / Tune-		
	Play		Play / Slow		
	>>/>>		>> / Tune+		
	Stop		Stop / Hold		
	Pause		Pause / Step / Freeze		
	Rec		Rec / Rec Mode		
	Off Timer		Sleep / Timer		
	My APP		Smart / List		
	e-Help		Audio / Lang I/II		

