









 

 








 














































 



Original	Replacement
	 Power
	 Guide / EPG / -/-
	 Text / Goto
	 AV / Input / RDS
	 Menu / Home
	 Picture / Format
	 Shift + Display / Media
	 Zoom / Size
	 Info / Angle
	 Exit / Cancel / Clear
	 Display / Media
	 Shift + Red / Netflix /
	 Smart / List
	 Up
	 Down
	 Left
	 Right

Original	Replacement
	 OK
	 D.Menu / Top
	 Back / Return
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Vol+
	 Vol-
	 Mute / Dimmer
	 CH+ / Page+
	 CH- / Page-
	 1
	 2
	 3
	 4
	 5





	Original	Replacement	Original	Replacement
	6			
	7			
	8			
	9			
	0			
	TV			TV/Radio /
	Recall			Shift + Back / Return
	<<			<< / Tune-
	Play			Play / Slow
	>>			>> / Tune+
	Stop			Stop / Hold
	Pause			Pause / Step / Freeze
	Rec			Rec / Rec Mode
	Lang			Audio / Lang I/II
	Subt.			Subtitle / EQ

