




































Original	Replacement
 Power	 Power
 Picture	 Picture / Format
 Input TV	 AV / Input / RDS
 Input AV	 Shift + AV / Input / RDS
 Netflix	 Shift + Red / Netflix /
 Rakuten TV	 Shift + Guide / EPG / -/--
 Prime Video	 Shift + Blue / Prime
 YouTube	 Shift + Yellow / YouTube /
 My App	 TV/Radio /
 Apps	 Shift + Green / APP /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Menu	 Menu / Home
 Home	 Shift + Menu /
 Home	 Display / Media

Original	Replacement
 Guide	 Guide / EPG / -/--
 i	 Info / Angle
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Option	 Setup / OPT /
 Down	 Down
 Back	 Back / Return
 Provider / List	 Smart / List
 Mic	 Sound / Title
 Scenery	 D.Menu / Top
 I<< / <<	 << / Tune-
 Play	 Play / Slow
 >> / >>I	 >> / Tune+
 Stop	 Stop / Hold





Original	Replacement
Pause	Pause / Step / Freeze
Rec	Rec / Rec Mode
Vol+	Vol+
Mute	Mute / Dimmer
CH+	CH+ / Page+
Vol-	Vol-
Text	Text / Goto
STTL	Subtitle / EQ
CH-	CH- / Page-
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8

Original	Replacement
9	9
Help	Eject / Surround
0	0
Last View	Fav / Marker / PC

