



Original	Replacement
 Power	 Power
 TV/HDD	 TV/R
 Tuner	 Subt
 CAM	 Format
 Guide	 Guide
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 T/C	 Pre Ch
 Back	 Back

Original	Replacement
 Disc Menu	 D. Menu
 HDD/Browser	 Media
 Stop	 Stop
 Pause	 Pause
 Play	 Play
 I<</Day-	 I<<
 >>I/Day+	 >>I
 Rec	 Rec
 Back Jump	 <<
 FWD Jump	 >>
 Channel+	 Ch +
 Channel-	 Ch -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK





	Original	Replacement	Original	Replacement
	Timer	AV		
	Edit	TEXT		
	Tv Vol+	Vol +		
	Tv Vol-	Vol -		
	Mute	Mute		
	[i+]	Info		
	System	Smart		
	Red	Red		
	Green	Green		
	Yellow	Yellow		
	Blue	Blue		

