



Original	Replacement	Original	Replacement
	Power		Red / Menu
	Power		Red
	Shift + Menu		Red / Menu
	Shift + Menu		Red / Menu
	Source		Red
	Source		Red
	I - II		Green / Menu
	I - II		Green
	Subtitles		Green / Menu
	Subtitles		Green
	[ i+ ]		Green / Menu
	[ i+ ]		Green
	[ ? ]		Yellow / Other
	[ ? ]		Yellow / Other
	Mix		Yellow
	Mix		Yellow
	Zoom		Yellow / Other
	Zoom		Yellow / Other
	Time		Blue / OK
	Time		Blue / OK
	[ PP ]		Blue / OK
	[ PP ]		Blue / OK
	DNR		Blue / OK
	DNR		Blue / OK
	Mosaic		Blue / OK
	Mosaic		Blue / OK
	Up		Blue / OK
	Up		Blue / OK
	Down		Blue / OK
	Down		Blue / OK
	Right		Blue / OK
	Right		Blue / OK
	Left		Blue / OK
	Left		Blue / OK
	Special Audio		Blue / OK
	Special Audio		Blue / OK
	Text		Blue / OK
	Text		Blue / OK
	P -		Blue / OK
	P -		Blue / OK
	P +		Blue / OK
	P +		Blue / OK
	Vol -		Blue / OK
	Vol -		Blue / OK
	Vol +		Blue / OK
	Vol +		Blue / OK
	1		Blue / OK
	1		Blue / OK
	2		Blue / OK
	2		Blue / OK
	3		Blue / OK
	3		Blue / OK





	Original	Replacement	Original	Replacement
	4			
	5			
	6			
	7			
	8			
	9			
	0			
	Mute			
	P < P			
	Format			
	Freeze			
	Smart Controls Picture			
	Smart Controls Audio			





Original		Replacement		Original		Replacement	
	Power		Power		Stop		Stop
	Time		TV/R		Play		Play
	Zoom		3D		Timer		Shift + AV
	Mix		Text		P-		Ch -
	[?]		Shift + Info		P +		Ch +
	[i+]		Info		1		1
	Freeze/Rec		Pause		2		2
	Format/Stop		Format		3		3
	Source		AV		4		4
	I-II		Dual		5		5
	Up		Up		6		6
	Down		Down		7		7
	Right		Right		8		8
	Left		Left		9		9
	Rec		Rec		0		0
	<<		<<		-/-		Guide
	>>		>>				

