







 














 

 



 

 





Original	Replacement
	
Power	Power
	
Stop	Stop / Hold
	
Pause	Pause / Step / Freeze
	
<<	<< / Tune-
	
Play	Play / Slow
	
>>	>> / Tune+
	
Source	AV / Input / RDS
	
TV	TV/Radio /
	
Format	Picture / Format
	
Home	Menu / Home
	
List	Smart / List
	
Info	Info / Angle
	
Adjust	D.Menu / Top
	
Options	Setup / OPT /
	
Up	Up
	
Down	Down
	
Right	Right

Original	Replacement
	
Left	Left
	
OK	OK
	
Back	Back / Return
	
CH+	CH+ / Page+
	
CH-	CH- / Page-
	
Vol+	Vol+
	
Vol-	Vol-
	
Mute	Mute / Dimmer
	
Red	Red / Netflix / Search
	
Green	Green / APP / Repeat
	
Yellow	Yellow / YouTube / Repeat
	
Blue	Blue / Prime Video / Random
	
1	1
	
2	2
	
3	3
	
4	4
	
5	5





Original		Replacement		Original		Replacement	
MNO 6	6	TUNER 6	6				
7 PQRS	7	AUX - HDD 7	7				
8 TUV	8	USB 8	8				
WXYZ 9	9	BLUETOOTH 9	9				
0	0	HDMI - BAT 0	0				
SUBTITLE	Subtitle	EQ SUBTITLE	Subtitle / EQ				
TEXT	Text	GOTO TEXT	Text / Goto				

