





 
 

 


 







 

 




 
 

 

 

 



 


 
 



 


 



Original	Replacement
 Power	 Power
 Ambilight	 Options
 *	 Menu
 Colors	 Info
 Sources/Pair	 AV
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 ←	 Back
 Home	 Smart
 +	 Pre Ch
 <<<	 <<<
 Play	 Play
 >>>	 >>>
 Stop	 Stop

Original	Replacement
 Pause	 Pause
 Rec	 Rec
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Netflix	 Media
 Windows	 D. Menu
 CH+	 Ch +
 CH-	 Ch -
 Rakuten Tv	 TV/R
 Exit TV	 Exit
 1	 1
 2	 2





Original		Replacement		Original		Replacement	
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Text		Text				
	TV Guide/List		Guide				

