




 


 


 









 


 



 










Original	Replacement	Original	Replacement
	Power		Power
	Info		Rec
	Search		Red
	Sources		Green
	Up		Yellow
	Down		Blue
	Right		Vol+
	Left		Vol-
	OK		Mute
	←		Netflix
	Home		Windows
	≡		Rakuten Tv
	<<		CH+
	Play		CH-
	>>		Exit/Tv
	Stop		1
	Pause		2
			3





Original	Replacement
4	4
5	5
6	6
7	7
8	8
9	9
0	0
TEXT	REPEAT TEXT
List/Tv Guide	GUIDE

Original	Replacement

