
















 






 
 


 
 







 



 



 









 



 
 



 




 

 
 







Original	Replacement	Original	Replacement
	Power		Power
	Repeat		Text
	Program		Shift + Sleep
	Shuffle		Guide
	Tape A/R		Pre Ch
	Display		Info
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Title >		>>
	I< Title		I<<
	Stop		Stop
	Play/Pause		Play
	Album >>		>>
	<< Album		<<
	Clock		Smart
	Timer On/Off		TV/R
	Timer		AV
	Natural		Back
	Rec		Rec
	DIM		Media
	Sleep		Sleep
	Snooze		Exit
	Bass+		Right
	Bass-		Left
	Treble+		Ch +
	Treble-		Ch -
	Inc Surr.		Menu





Original	Replacement	Original	Replacement
	Power		Power
	Repeat		Text
	Program		Sleep
	Shuffle		Guide
	Tape A/R		Pre Ch
	Display		Info
	Vol+		Vol +
	Vol-		Vol -
	Title >		>>
	< Title		<<
	Stop		Stop
	Play/Pause		Play
	Album >>		>>
	<< Album		<<

