 

























 




















 

 





Original	Replacement
	 Power
	 Info / Angle
	 AV / Input / RDS
	 Up
	 Shift + Red / Netflix /
	 Down
	 Right
	 Left
	 OK
	 Back / Return
	 Menu / Home
	 Setup / OPT /
	 << / Tune-
	 Play / Slow
	 >> / Tune+
	 Stop / Hold
	 Pause / Step / Freeze

Original	Replacement
	 Rec / Rec Mode
	 Smart / List
	 Display / Media
	 TV/Radio /
	 Vol+
	 Vol-
	 Mute / Dimmer
	 CH+ / Page+
	 CH- / Page-
	 Exit / Cancel / Clear
	 Text / Goto
	 1
	 2
	 3
	 4
	 5
	 6





Original	Replacement	Original	Replacement
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 Tv Guide	 Guide / EPG / -/--		

