 

 

 



 

 



 


 










 



















 

 

Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Preset/Album	 Up
 Preset/Album	 Down
 >>	 >>  / Preset+
  <<	  << / Preset-
 OK	 OK
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Menu	 Menu / Home
 RDS/Display	 Display / Media
 Vol+	 Vol+
 Vol-	 Vol-
 1	 1
 2	 2
 3	 3

Original	Replacement
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Prog/Clock Set	 Setup / OPT /
 Repeat/Shuffle	 Green / APP / Repeat
 Sleep/Timer	 Sleep / Timer
 DSC	 Picture / Format
 DBB	 D.Menu / Top



 


 















 



 

 

Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Preset/Album	 Up
 Preset/Album	 Down
 >>I	 >>I / Preset+
 I<<	 I<< / Preset-
 OK	 OK
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Menu	 Menu / Home
 RDS/Display	 Display / Media
 Vol+	 Vol+
 Vol-	 Vol-
 1	 1
 2	 2
 3	 3

Original	Replacement
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Prog/Clock Set	 Setup / OPT /
 Repeat/Shuffle	 Green / APP / Repeat
 Sleep/Timer	 Sleep / Timer
 DSC	 Picture / Format
 DBB	 D.Menu / Top
















 


 

 
Original	Replacement
	 Power
	 Mute / Dimmer
	 Up
	 Down
	 >>I / Preset+
	 I<< / Preset-
	 OK
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold
	 Menu / Home
	 Display / Media
	 Vol+
	 Vol-
	 1
	 2
	 3

Original	Replacement
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Setup / OPT /
	 Green / APP / Repeat
	 Sleep / Timer
	 Picture / Format
	 D.Menu / Top





Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Preset/Album	 Up
 Preset/Album	 Down
 >>	 >>  / Preset+
  <<	  << / Preset-
 OK	 OK
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Menu	 Menu / Home
 RDS/Display	 Display / Media
 Vol+	 Vol+
 Vol-	 Vol-
 1	 1
 2	 2
 3	 3

Original	Replacement
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Prog/Clock Set	 Setup / OPT /
 Repeat/Shuffle	 Green / APP / Repeat
 Sleep/Timer	 Sleep / Timer
 DSC	 Picture / Format
 DBB	 D.Menu / Top

