 





























	Original	Replacement	Original	Replacement
	Source	 AV / Input / RDS		
	Mute	 Mute / Dimmer		
	Vol-	 Vol-		
	Vol+	 Vol+		
	Stop	 Stop / Hold		
	Play	 Play / Slow		
	Pause	 Pause / Step / Freeze		
	I<<	 I<< / Preset-		
	>>I	 >>I / Preset+		
	Album/Preset	 CH- / Page-		
	Album/Preset	 CH+ / Page+		
	Del	 Display / Media		
	Rec	 Rec / Rec Mode		

