



 



 






 







 



 


 








Original	Replacement
	 Power
	 D.Menu / Top
	 Guide / EPG / -/-
	 Shift + Green / APP / REPEAT
	 Shift + 0
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Menu / Home
	 Shift + Menu /
	 Setup / OPT /
	 Back / Return
	 Info / Angle
	 Up
	 Down
	 Left

Original	Replacement
	 Right
	 OK
	 I<< / Preset-
	 Play / Slow
	 Pause / Step / Freeze
	 >>I / Preset+
	 << / Tune-
	 Stop / Hold
	 >> / Tune+
	 Vol+
	 Vol-
	 Mute / Dimmer
	 Eject / Surround
	 CH+ / Page+
	 CH- / Page-
	 1
	 2





Original	Replacement	Original	Replacement
3 DEF	3	CD - STB	3
4 GHI	4	VIDEO	4
5 JKL	5	TAPE	5
6 MNO	6	TUNER	6
7 PQRS	7	AUX - HDD	7
8 TUV	8	USB	8
9 WXYZ	9	BLUETOOTH	9
0 _ @	0	HDMI - BAT	0
SUBTITLE	Subtitle	EQ	Subtitle / EQ
AUDIO	Audio	LANG I/II	Audio / Lang I/II

